

IMS QUICK REFERENCE

IMS Startup

1. Insert the key in the ignition.
2. Start the vehicle engine.
3. Wait for the 120-second countdown and the engine to shut down.
4. The IMS is now active.

IMS Shutdown

1. Place the vehicle in PARK.
2. Remove the key from the ignition.
3. The IMS will be disabled and the screen will shut down in one minute.

IMS Engine Start Options

1. Press and release the brake pedal.
2. Turn the key to the START position.
3. Engage the IMS Bypass feature. (if applicable)



Heating/Cooling Indicator



Battery State of Charge

Climate Control Status



NOTICE: The climate control status corresponds to the factory blend door control setting.

International, Isuzu, and Chevrolet HD 5500/6500: Once you have set the blend door to heat or cool, ensure to press the **up arrow** for **heat** or the **down arrow** for **cool** for proper operation.

ZeroKEY Mode
On (green) / Off (white)



Info Screen (Hold for two seconds.)

IMS Running Engine

Engine Off in IMS Mode



CONTACT OUR SUPPORT TEAM AT:

1-844-ZERORPM (937-6776)

SUPPORT@ZERORPM.COM