

**ZeroKEY Mode allows the operator to remove the key from the ignition and to secure the chassis by locking the doors, all while HVAC and the vehicle's electrical components continue to function.**

In order for ZeroKEY Mode to function the vehicle must be in Park, the hood must be closed, and the Idle Mitigation System® (IMS®) must be active.

1. To engage ZeroKEY Mode, press the softkey below the ZeroKEY icon and remove the key from the ignition.

1.1 The ZeroKEY icon will turn green.

**NOTICE:** The operator has 10 seconds to remove the key from the ignition switch once ZeroKEY Mode is engaged. If the key is not removed within this timeframe, ZeroKEY mode will be disengaged and the ZeroKEY icon will turn white.

1.2 The IMS will remain engaged and have full control over the vehicle's HVAC and electronics. The chassis engine will start in order to charge the batteries if they reach the low battery set point.

2. To exit ZeroKEY Mode, insert the key into the ignition and turn it to the Run position. The ZeroKEY icon will turn white.

2.1 The chassis engine can now be started by pressing the brake pedal or by turning the key to the Start position.



Step 1



Step 1.1



Step 2.1