

IMS QUICK REFERENCE

IMS Startup

1. Insert the key in the ignition.
2. Start the vehicle engine.
3. Wait for the five-second countdown and the engine to shut down.
4. The IMS is now active.

IMS Shutdown

1. Place the vehicle in PARK.
2. Remove the key from the ignition.
3. The IMS will be disabled and the screen will shut down in one minute.

IMS Engine Start Options


1. Press and release the brake pedal.
2. Engage the IMS Bypass feature.
3. Turn the key to the START position.



Heating/Cooling Indicator



ZeroIDLE® Mode On/Off

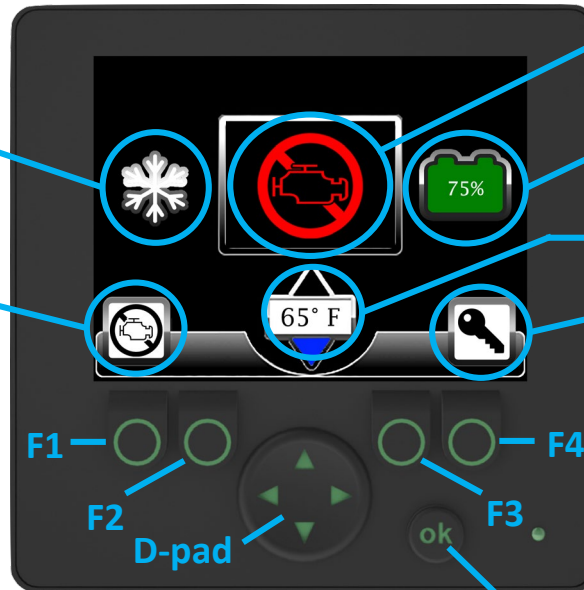

Engine State – Running/Off



Battery State of Charge

Target Temperature Setting

ZeroKEY Mode On/Off



Info Screen (Hold for two seconds.)

NOTICE: The IMS will operate only if the key is in the ignition in the RUN position (unless ZeroKEY® Mode is active).



CONTACT OUR SUPPORT TEAM AT:

1-844-ZERORPM (937-6776)

SUPPORT@ZERORPM.COM